FORD TRANSIT AUXILIARY FUEL CONNECTION



FORD TRANSIT AUXILIARY FUEL CONNECTION

A WORLD OF COMFORT

Eberspächer

FORD TRANSIT AUXILIARY FUEL CONNECTION

Step-by-step instructions:

Step 1 Cut 23 mm off from 22.1000.20.3000. Then cut at 45° angle at one end of the 20.2900.20.0050 fuel line.

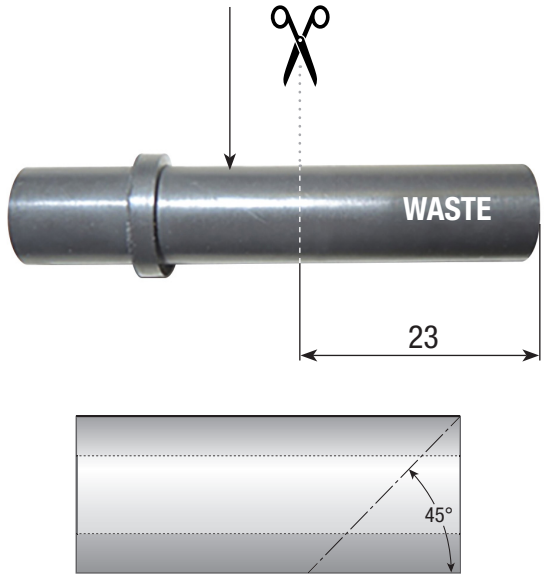

Fig.1

Step 2 Assemble fuel connection assembly according to figure 2.

(1) 20.2900.20.0050 **1** Plastic Fuel Line 2mm X 2.0m
(2) 10.2068.01.1098 **2** Clamp 11mm
(3) 22.1000.20.3000 **1** Fuel Line Adapter 7.5MM - 3.5MM



Fig. 2

Step 3 Drill 4mm hole in approximate location.

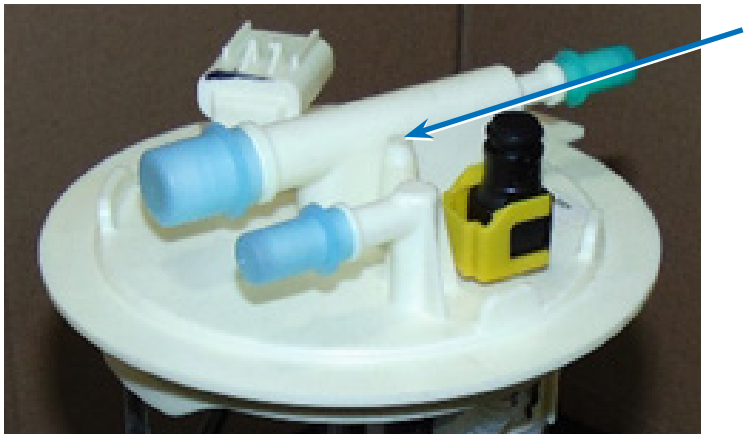

Fig. 3

Step 4 Thread fuel line through hole drilled through the fuel sending unit.

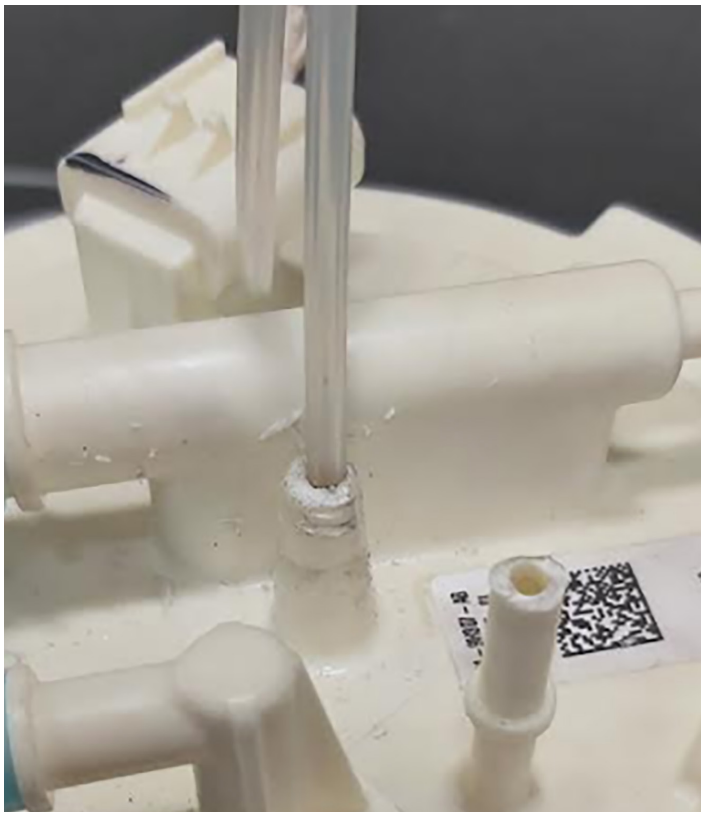

Fig. 4

Step 5 Connect adaptor and fuel line ensuring fuel line is pushed as far as possible to elbow, secure 11mm clamp

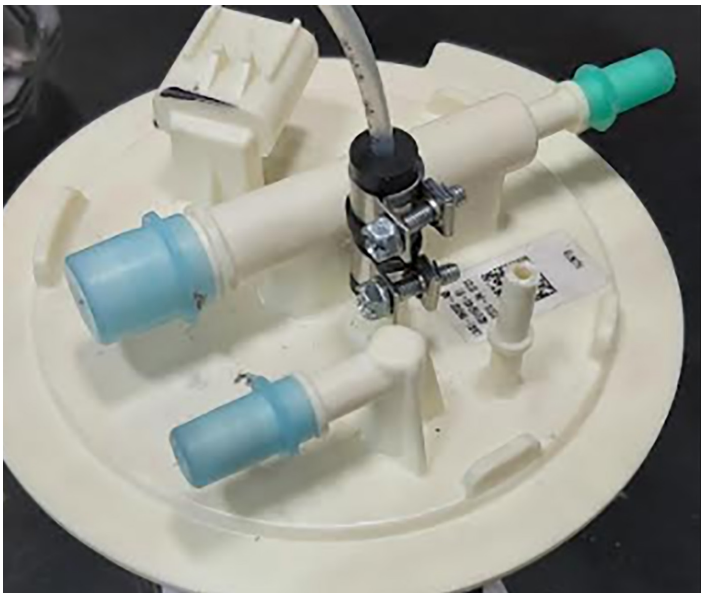

Fig. 5

Step 6 Secure Fuel Line to Sending Unit

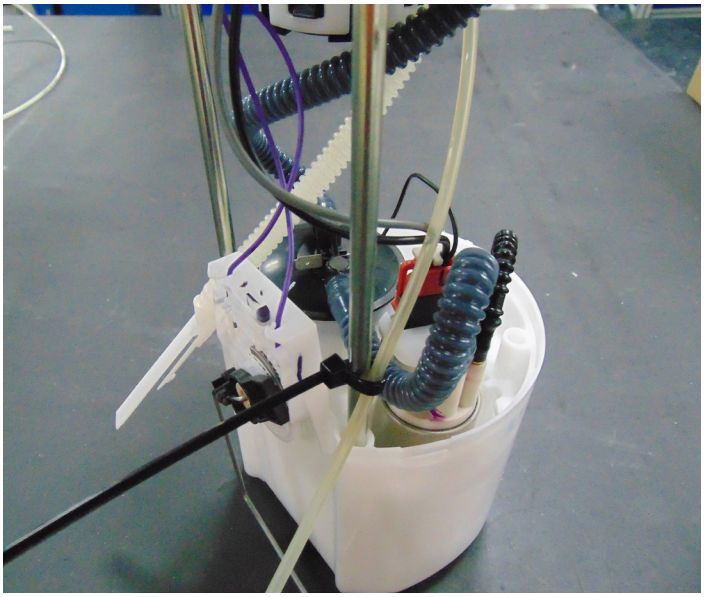

Fig. 6

Step 7 Bring Fuel line to fuel metering pump

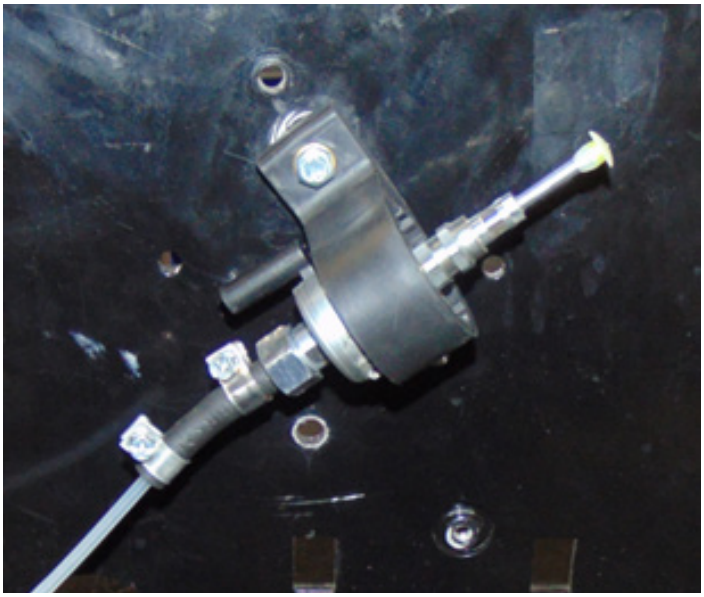

Fig. 7

Eberspaecher's full line of heating system can be used in many applications, such as trucks,buses, motorhomes, off-highway equipment and marine.
Contact your local dealer for more information.
A member of the Worldwide Eberspächer Group of Companies.

Eberspaecher Climate Control Systems
(800) 387-4800
(905) 670-0960
(905) 670-0728 Fax
help@eberspaecher-na.com
www.eberspaecher-na.com

Eberspächer

Web Edition · EN · 04/2022
Printed in Canada. Subject to change without notice.